INSTRUCTION MANUAL

SANYO

Adaptor

For In-ceiling Bracket Closed Type (VA-80ME series)

VA-80AE

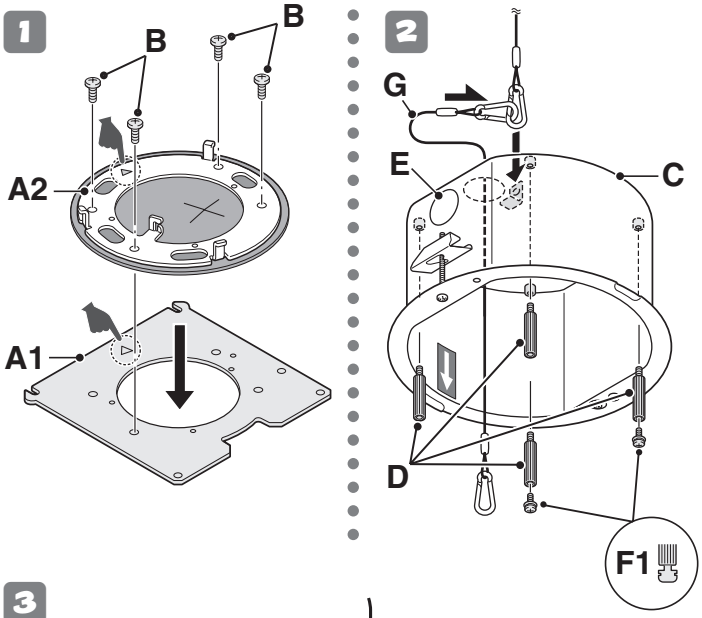

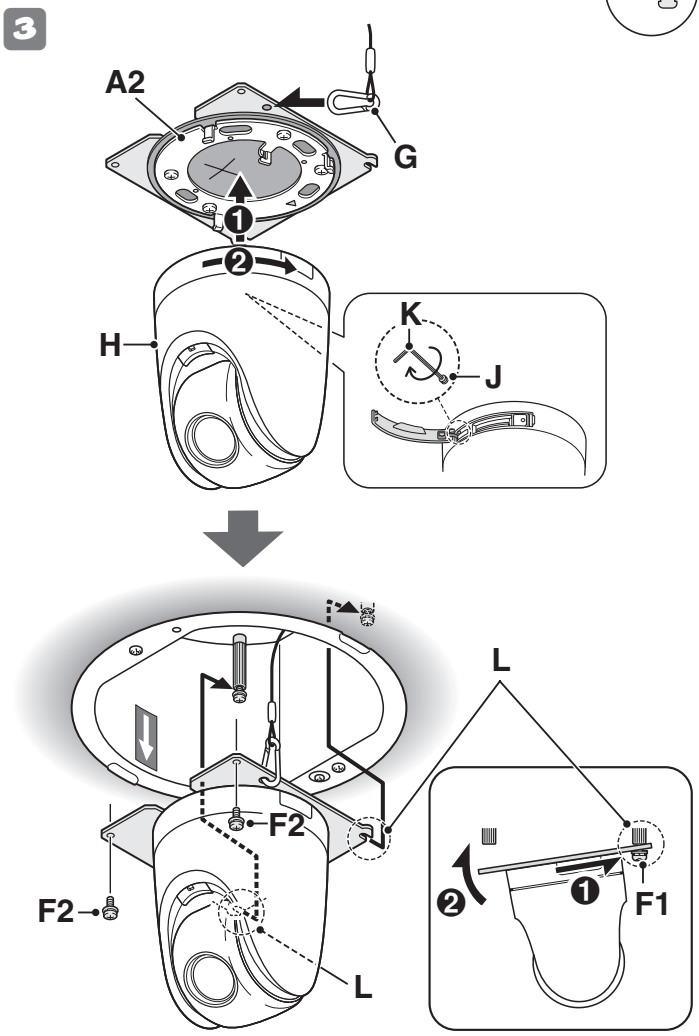

Before installing and using this unit, please read this manual carefully.

Be sure to keep it handy for later reference.

1 Align the △ mark on the adaptor A1 with the △ mark on the mounting plate A2 that is supplied with the camera and fix them using the screws B (4 places, accessory ③).

* Make sure the mounting plate is installed on the front side (the side with projections) of the adaptor.

2 Prepare the in-ceiling bracket for installing the adaptor.

1) Securely insert the spacers **D** (4 places, accessory ②) into the holders on the bottom of the in-ceiling bracket **C**.

2) Loosely tighten the screws **F1** (2 places, accessory ④) on the spacers **D** located opposite to the hole (**E**) in the in-ceiling bracket.

3) Hook the safety wire **G** (accessory ①) and the in-ceiling bracket to the safety wire from the ceiling.

3 Install the camera.

1) Hook the other end of the safety wire **G** to the hook of the adaptor **A1** and connect the wires from the ceiling to the camera **H**.

2) Align and attach the camera **H** to the mounting plate **A2**. Open the side cover of the camera and tighten the fall-prevention screw **J** using the hexagonal wrench **K** supplied with the camera. Close the side cover.

3) Hold the camera with both hands, align the two slits (**L**) of the adaptor with the two loosely tighten screws **F1** and tighten the screws.

4) Fix the adaptor using the screws **F2** (2 places, accessory ④).

■ Specification

Weight: Approx. 200 g

Features and specifi cations are subject to change without prior notice or obligations.

■ Accessories

■ Dimensions

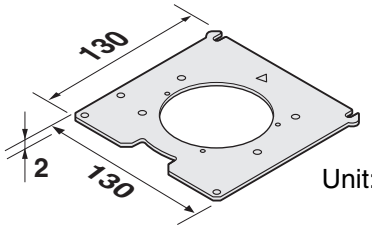

Unit: mm

取扱説明書

アダプター

カメラ取付金具（埋め込み型：VA-80ME シリーズ）

VA-80AE

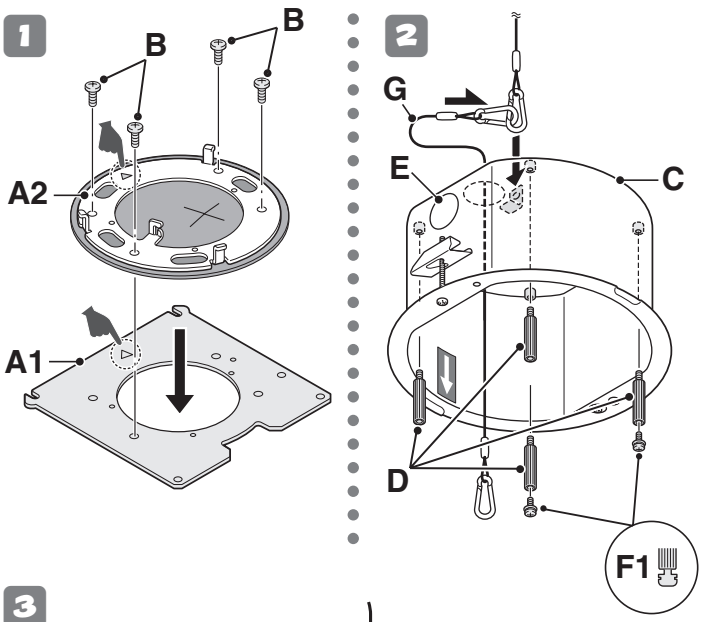

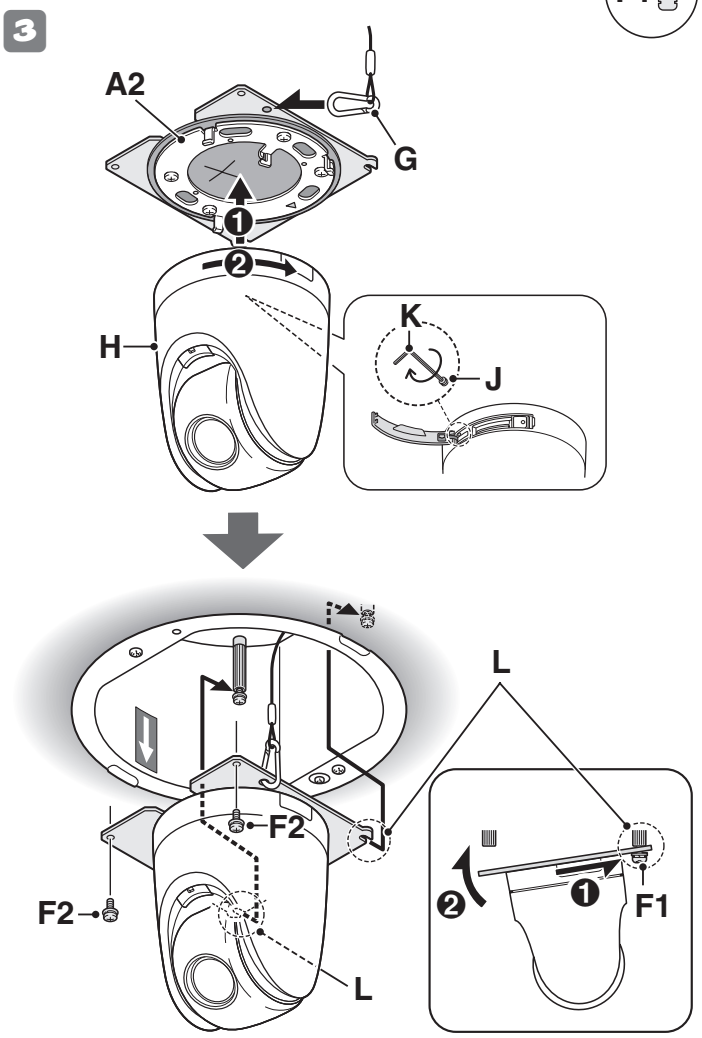

ご使用前にこの取扱説明書をよくお読みのうえ、正しくお使いください。また、後々のために大切に保管してください。

1 アダプター A1（△ 印）とカメラに付属のマウンティングプレート A2（△ 印）を合わせて、ネジ B（付属4本 ③）で固定する

＊マウンティングプレートはアダプターの表面（ダボがある面）に取り付けてください。

2 カメラ取付金具への取付け準備

1) カメラ取付金具**C**の底面の金具にスペーサー **D**（付属４本②）をしっかりと取付ける

2) カメラ取付金具の穴（**E**）が無い反対側の２本のスペーサー **D**にネジ**F 1**（付属２本④）を仮止めする

3) 天井からのセーフティーワイヤーにセーフティーワイヤー **G**（付属①）を取り付け、カメラ取付金具をぶらさげる

3 カメラの設置

1) 天井からのセーフティーワイヤー**G**をアダプター**A1** のフック部に引っ掛け、天井からの配線をカメラ**H**に接続をする

2) カメラ**H**をマウンティングプレート**A2**に合わせて取り付け、カメラの側面カバーを開けて、落下防止ネジ **J** をカメラ付属の六角レンチ **K** で締め付け、側面カバーを閉める

3) カメラ部を両手で持ち、アダプターの双方の切込み（**L**）を２本の仮止めネジ**F1** に合わせて差し込み固定する

4) ネジ**F2**（付属２本④）でアダプターを固定する

■ 仕様

質量：約200ｇ

外観および仕様は、お断りなしに変更することがあります。ご了承ください。

■ 付属品

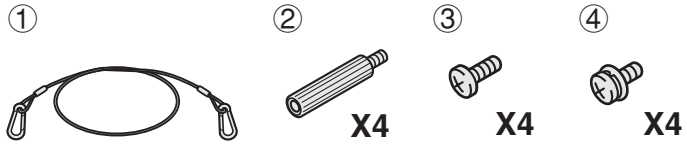

■ 外形寸法図

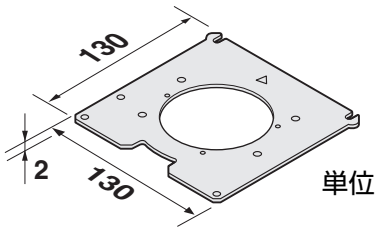

単位；㎜

1AC6P1P4060--
L9BLC/WA (0410KP-KV)

PRINTED WITH SOY INK

SANYO Electric Co., Ltd.
Printed in China